


To verify the firmware version of your sensor, please follow the instructions below.

1. Connect your sensor to Leddar Configurator.
2. Click on View > State, to open the Device State window.

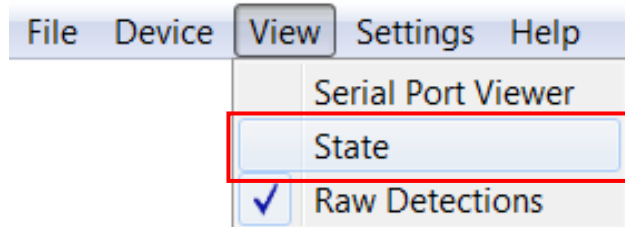

3. In the Device State Window, the Software Version field corresponds to your firmware version.

